



704 Beacon Lake Drive Raleigh, NC 27610 Tel: (919)255-3335 Fax: (919)255-3319

<http://www.deejayseventrentals.com>

Popcorn Instructions

Important Precautions

- Machine needs to be plugged into a dedicated 15 amp circuit to operate properly.
- Always have the kettle heat switch OFF when not popping corn.
- The kettle will get very hot! USE CAUTION ALWAYS.
- Household extension cords should not be used. Heavy-duty extension cords are acceptable.
- Please do NOT put any type of tape on the popcorn machine doors.

Controls - There are three switches on the popper.

LIGHT AND WARMER SWITCH - Turns on the heat lamp to keep popcorn warm.

KETTLE MOTOR SWITCH - Turns on the kettle motor.

KETTLE HEAT SWITCH - Turns on the kettle heat element.

Popping Instructions

1. Turn all switches "ON".
2. For 1st batch only, let kettle heat about 4 - 10 minutes.
3. Add butter and popcorn packet into the kettle.
4. Dump kettle when popping is 99% completed.
5. Repeat steps 3 and 4. We recommend popping at least 5 batches each time you pop.
6. On Final Batch Only: Turn kettle HEAT switch OFF as soon as corn starts popping rapidly. When popcorn is done popping, turn kettle MOTOR switch off.

Care & Cleaning Instructions

1. Do not remove kettle or immerse in water !
2. Each time you finish a series of poppings, allow the kettle to cool down, and wipe the outside of the kettle with a cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and with a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle. DO NOT REMOVE the kettle from the machine.
3. Cleaning the cabinet of your machine is easy. Take a clean damp cloth and wipe excess grease from the glass. Wipe the outside of the machine also.

NOTE: Never use a glass or plastic cleaner that contains ammonia.