



EVENT RENTALS LLC

704 Beacon Lake Drive Raleigh NC 27610 (919)255-3335
http://www.DeeJaysEventRentals.com

Karaoke Machine

10/30/18

****IMPORTANT** **DURING TRANSPORT****

All cords should be UNPLUGGED from machine or the jacks can become damaged. Fees may apply.

- Parts:** _____ (1) **Karaoke Machine** (with power cable)
_____ (1) **Mic Box** (2 mics / 2 XLR to ¼ inch cables)
_____ (1) **Video Cable** (RCA to RCA for TV connection)
_____ (1) **IPOD Cable** (RCA to 1/8 inch)
_____ (1) **Song Book**
_____ (1) **Music: USB _____ or DVD _____**
_____ Vol E1: Discs 1-9,12-29 _____ Vol E2: Discs 1-18,20-30 _____ Vol P: Discs 13-16
_____ (1) **TV Monitor** (Optional – ordered separately)

Customer was shown that all items were present and reviewed.

_____ **Customer Initial** _____ **Staff Initial**

Instructions for Use:

1. Plug **power cable** into back of machine and electric socket. Turn all volume knobs down.
2. Plug **video cable** into the **yellow output jack** on the **BACK** of the machine (see arrow on machine). Plug the other end into the video/yellow port of a television.
3. Plug **XLR cable** into microphone (XLR) and Karaoke machine (1/4in) at the Mic1 and Mic2 jacks on the front of the machine.
4. Turn on the front **power button**. Ensure the Internal/external speaker switch on back of machine is in proper position (**internal** ON if only using machine / **external** ON if attaching external speakers).
5. If using an ipod/laptop to play music, plug the **ipod cable** into the **red/white jacks** of the AV2 section on the front of the machine with the other end plugged into the ipod/laptop. Adjust the **input** to AV2.